



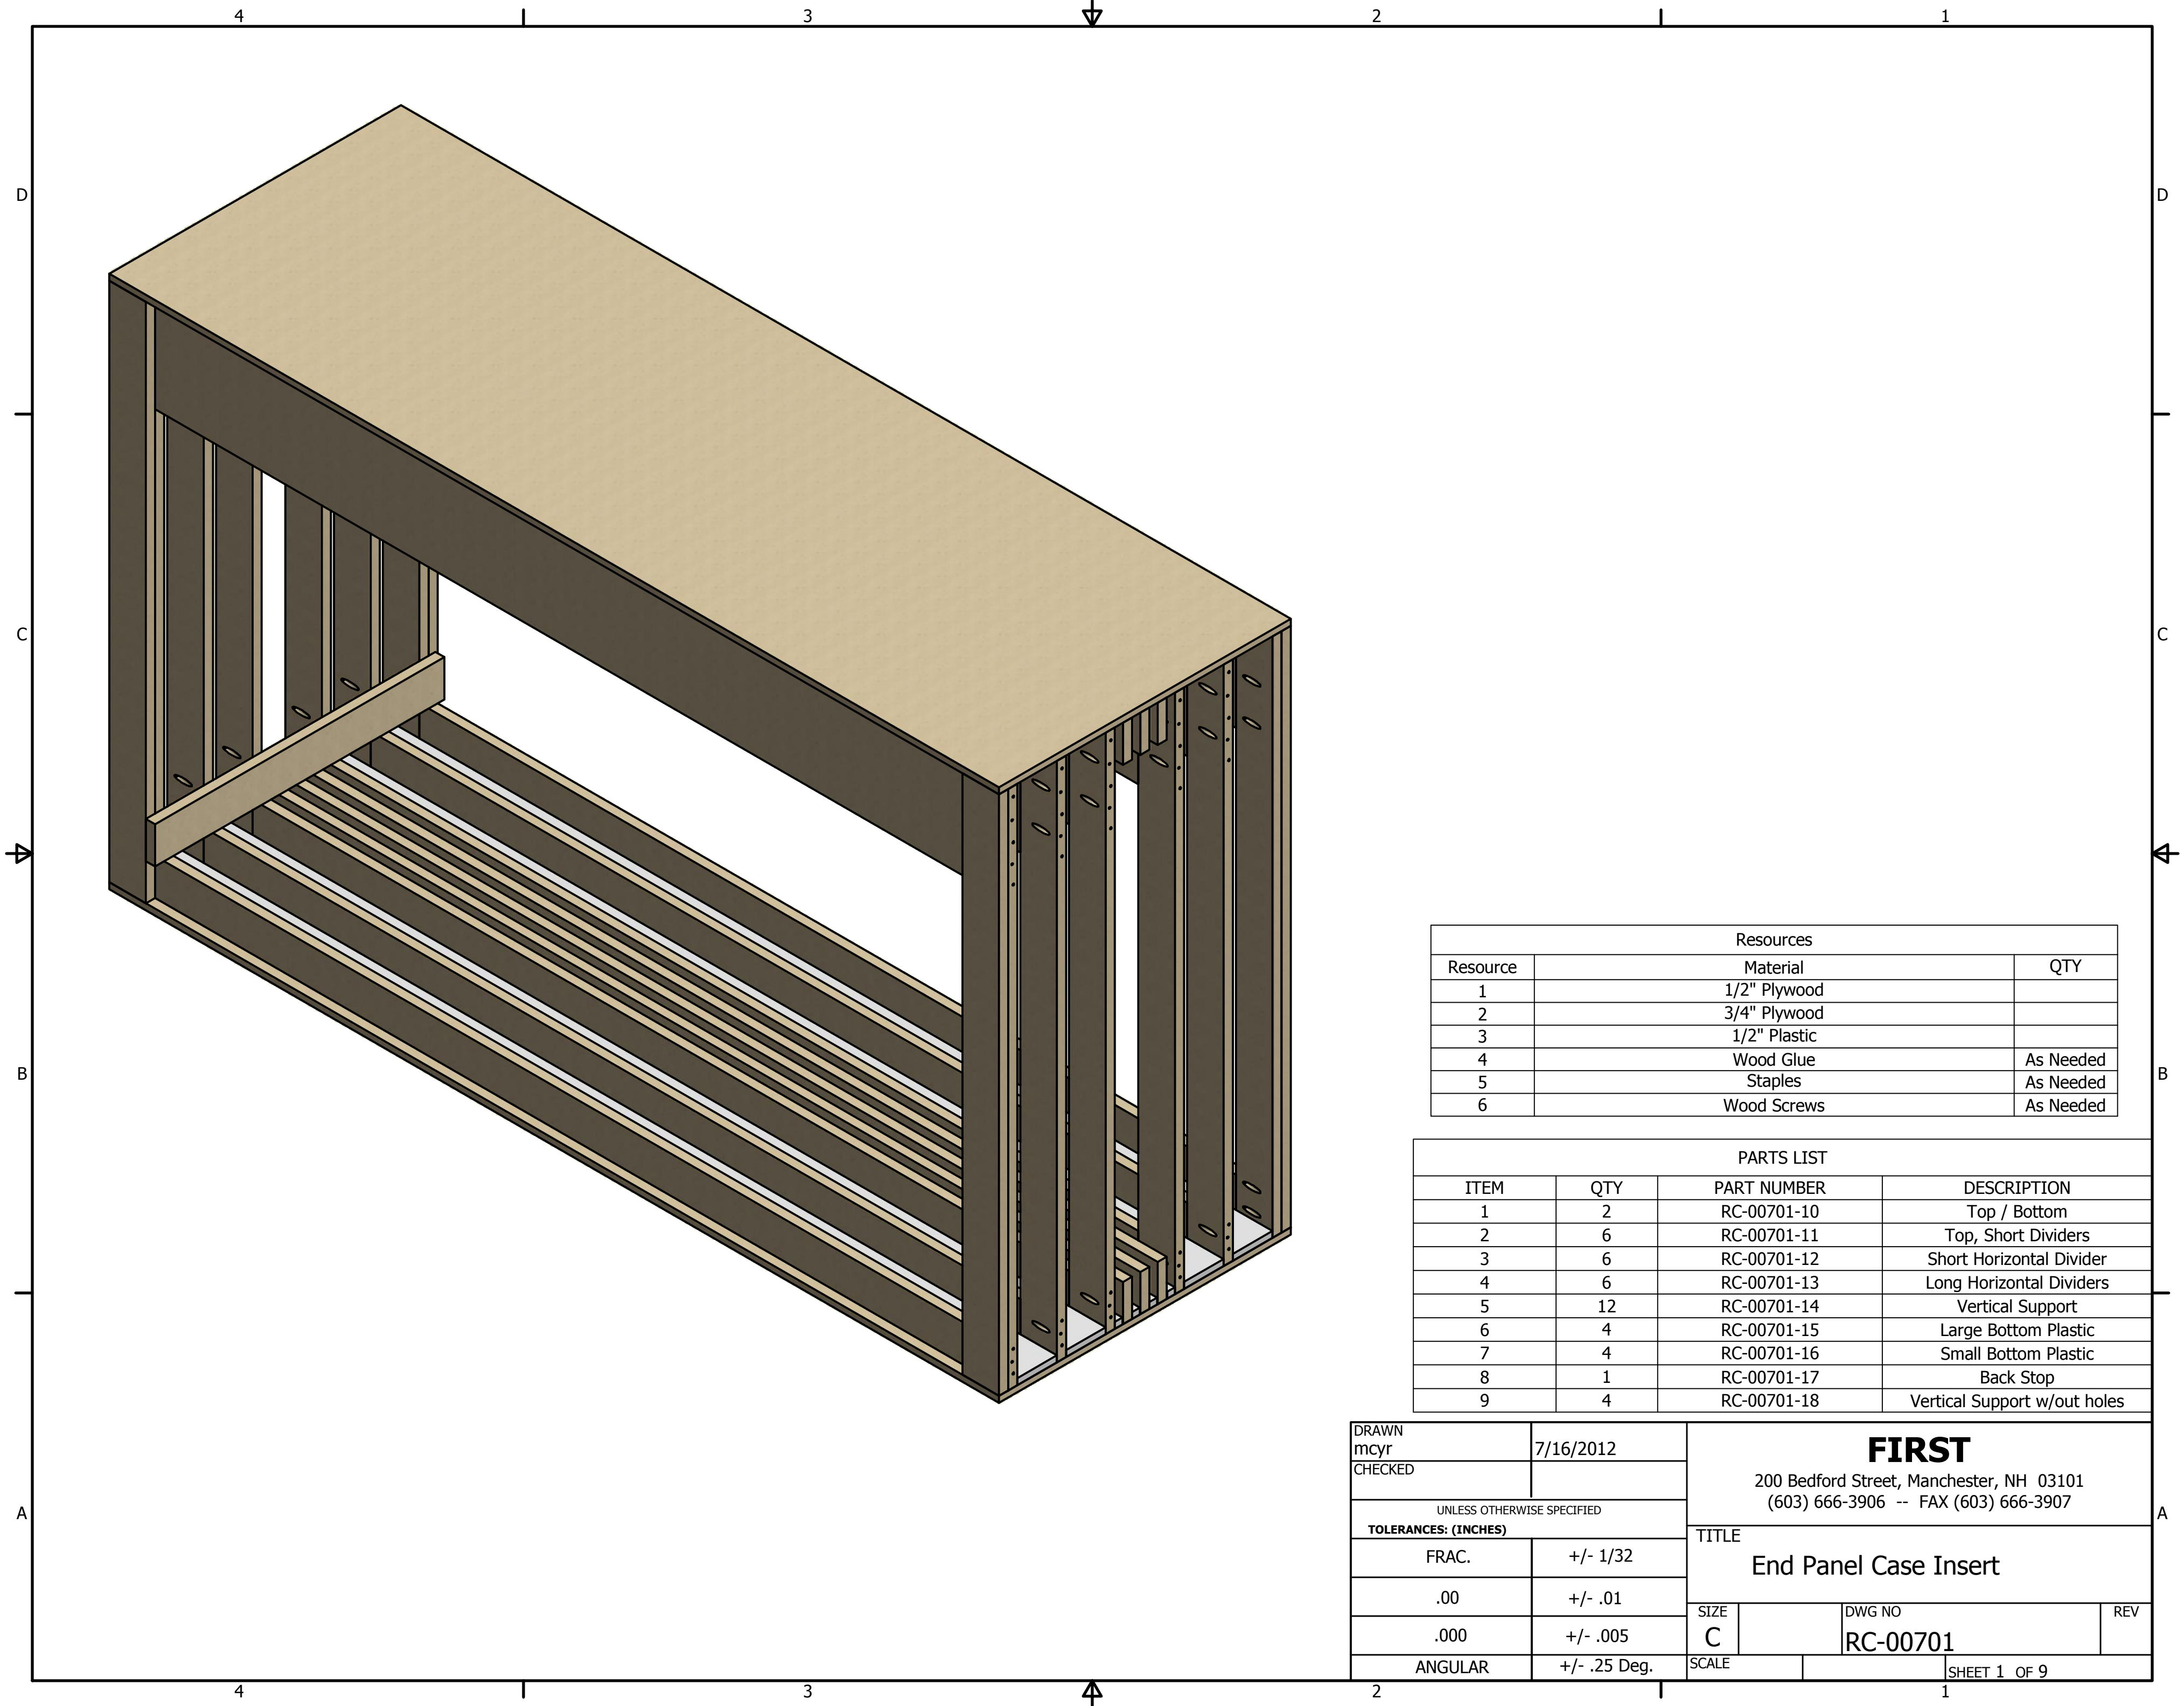

Resources		
Resource	Material	QTY
1	1/2" Plywood	
2	3/4" Plywood	
3	1/2" Plastic	
4	Wood Glue	As Needed
5	Staples	As Needed
6	Wood Screws	As Needed


PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	RC-00701-10	Top / Bottom
2	6	RC-00701-11	Top, Short Dividers
3	6	RC-00701-12	Short Horizontal Divider
4	6	RC-00701-13	Long Horizontal Dividers
5	12	RC-00701-14	Vertical Support
6	4	RC-00701-15	Large Bottom Plastic
7	4	RC-00701-16	Small Bottom Plastic
8	1	RC-00701-17	Back Stop
9	4	RC-00701-18	Vertical Support w/out holes

DRAWN mcy CHECKED		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
UNLESS OTHERWISE SPECIFIED				TITLE End Panel Case Insert			
TOLERANCES: (INCHES)							
FRAC.		+/- 1/32		SIZE C			
.00		+/- .01					
.000		+/- .005					
ANGULAR		+/- .25 Deg.		SCALE		SHEET 1 OF 9	
				DWG NO RC-00701		REV	

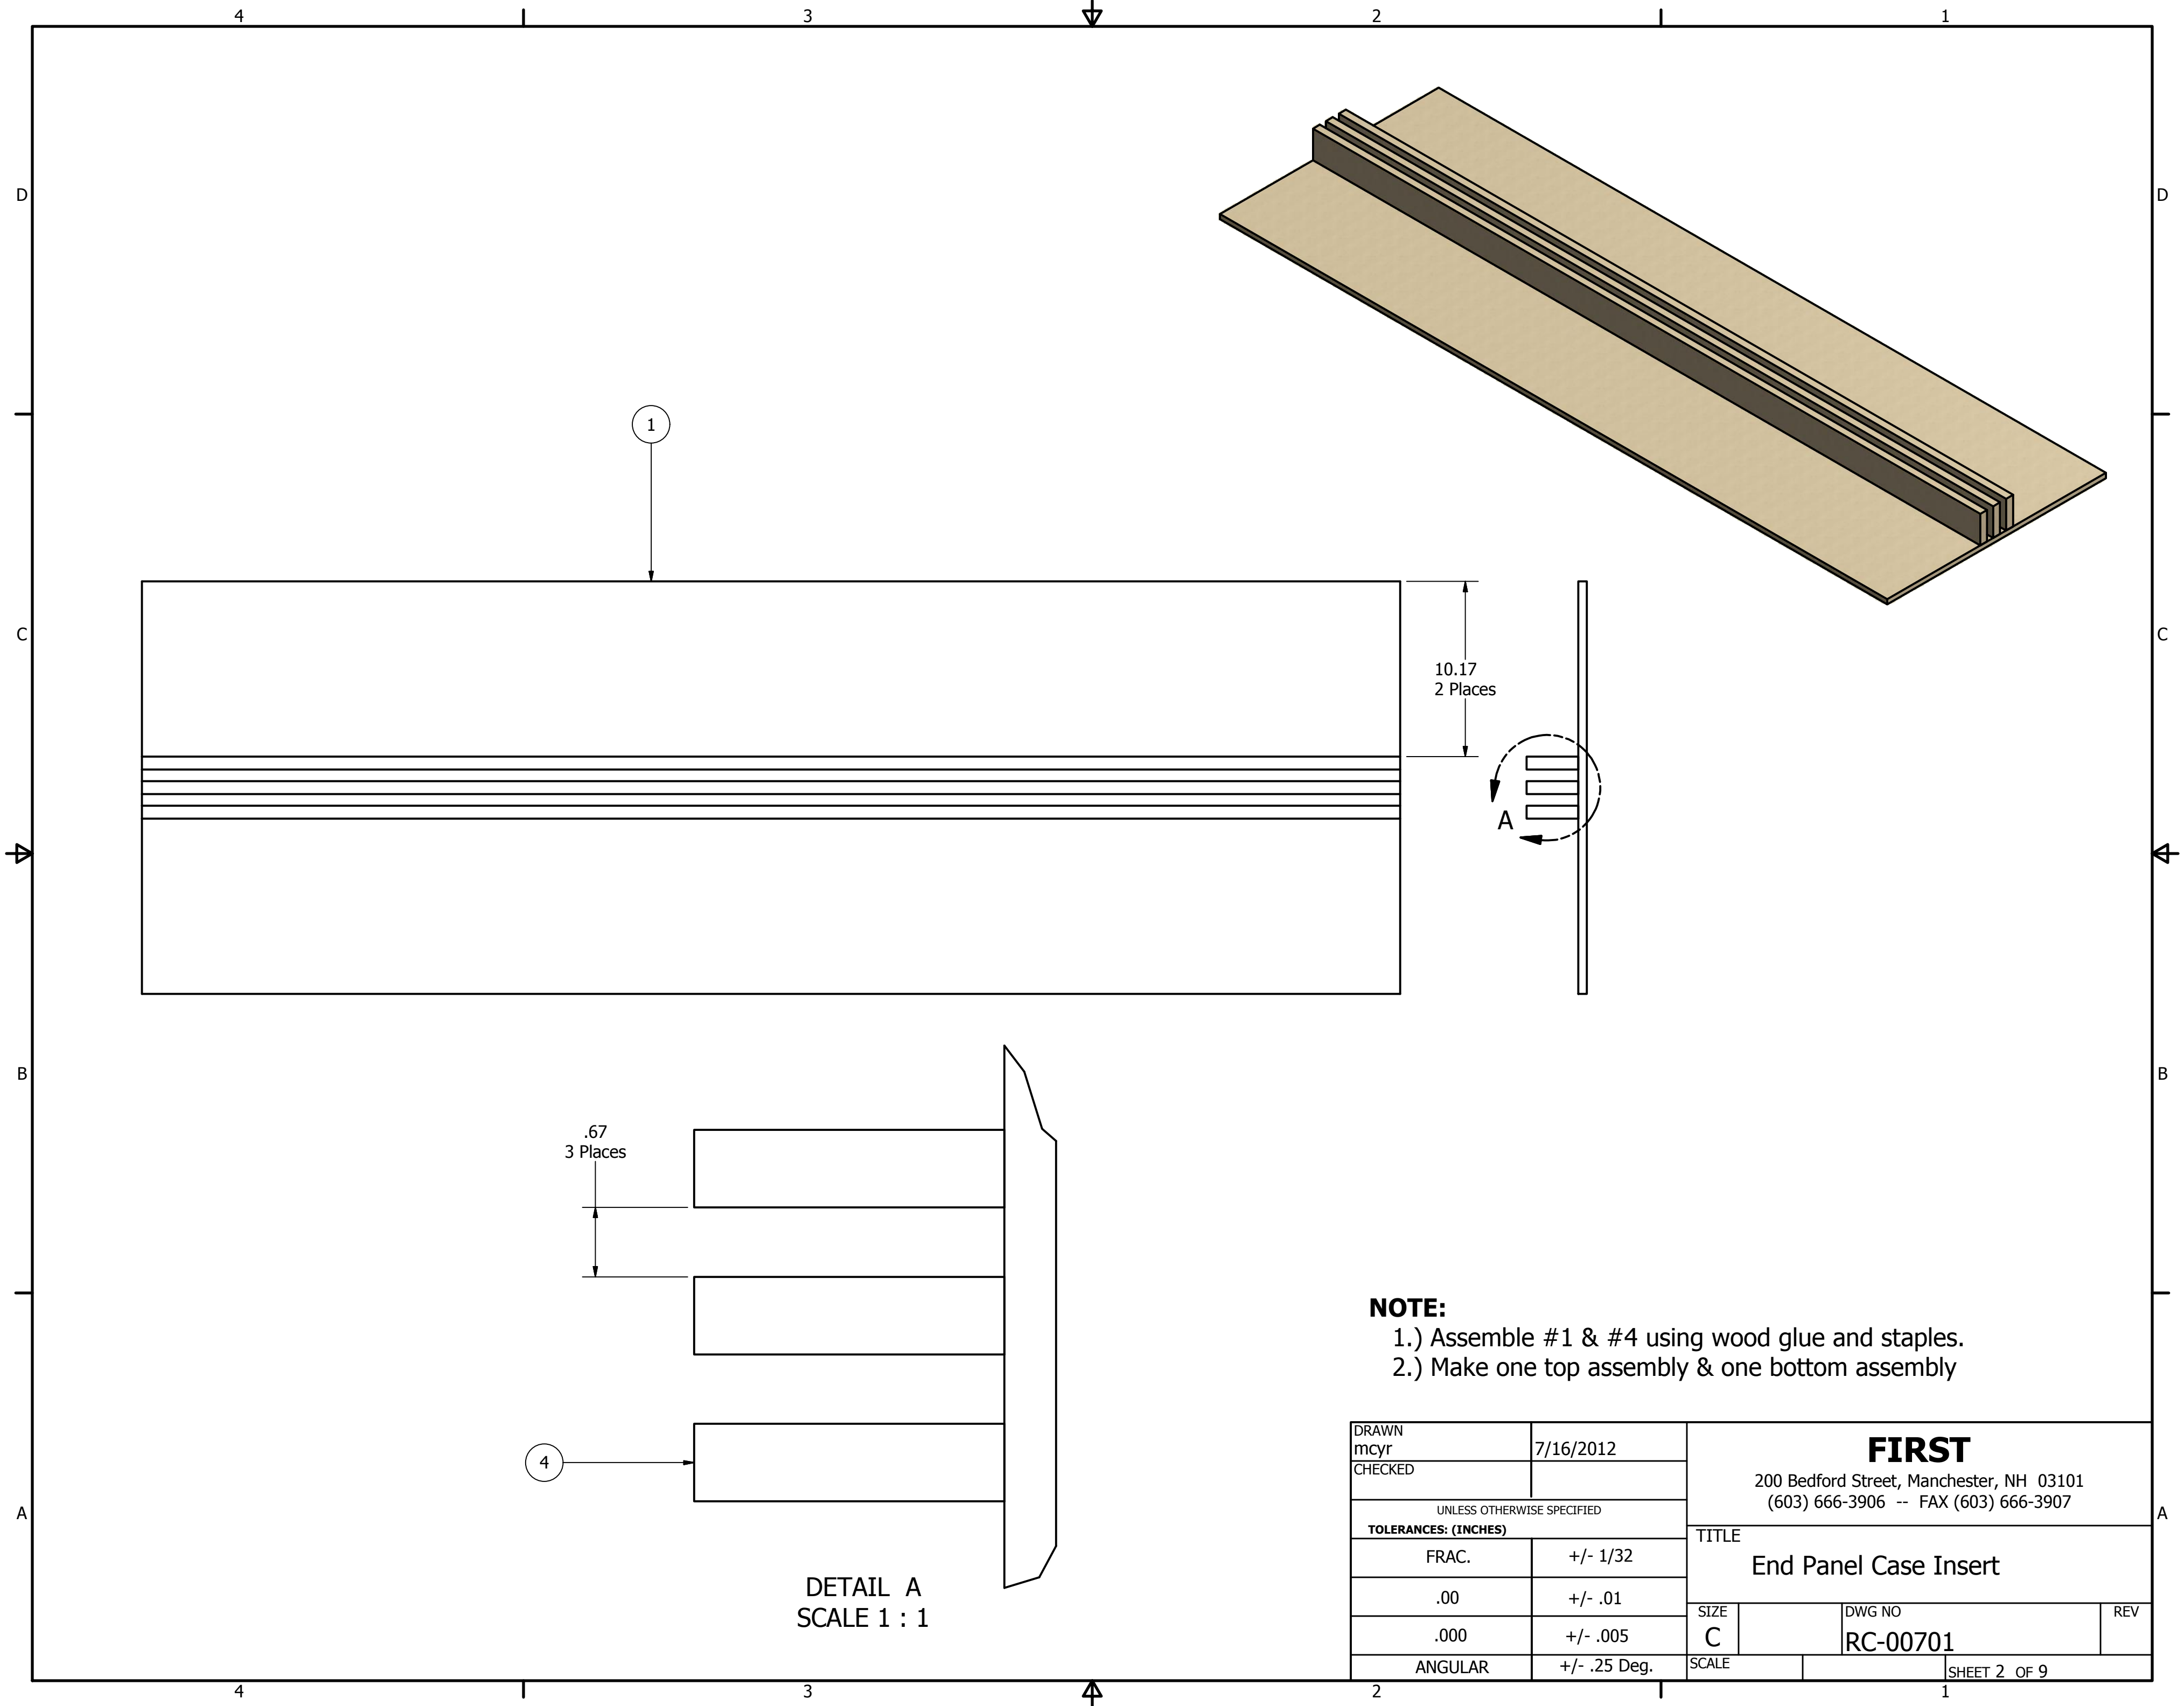


- NOTE:**
- 1.) Assemble #1 & #4 using wood glue and staples.
 - 2.) Make one top assembly & one bottom assembly

DRAWN mcy		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
CHECKED							
UNLESS OTHERWISE SPECIFIED				TITLE End Panel Case Insert			
TOLERANCES: (INCHES)							
FRAC.		+/- 1/32					
.00		+/- .01					
.000		+/- .005		SIZE	DWG NO		REV
ANGULAR		+/- .25 Deg.		C	RC-00701		
				SCALE		SHEET 2 OF 9	

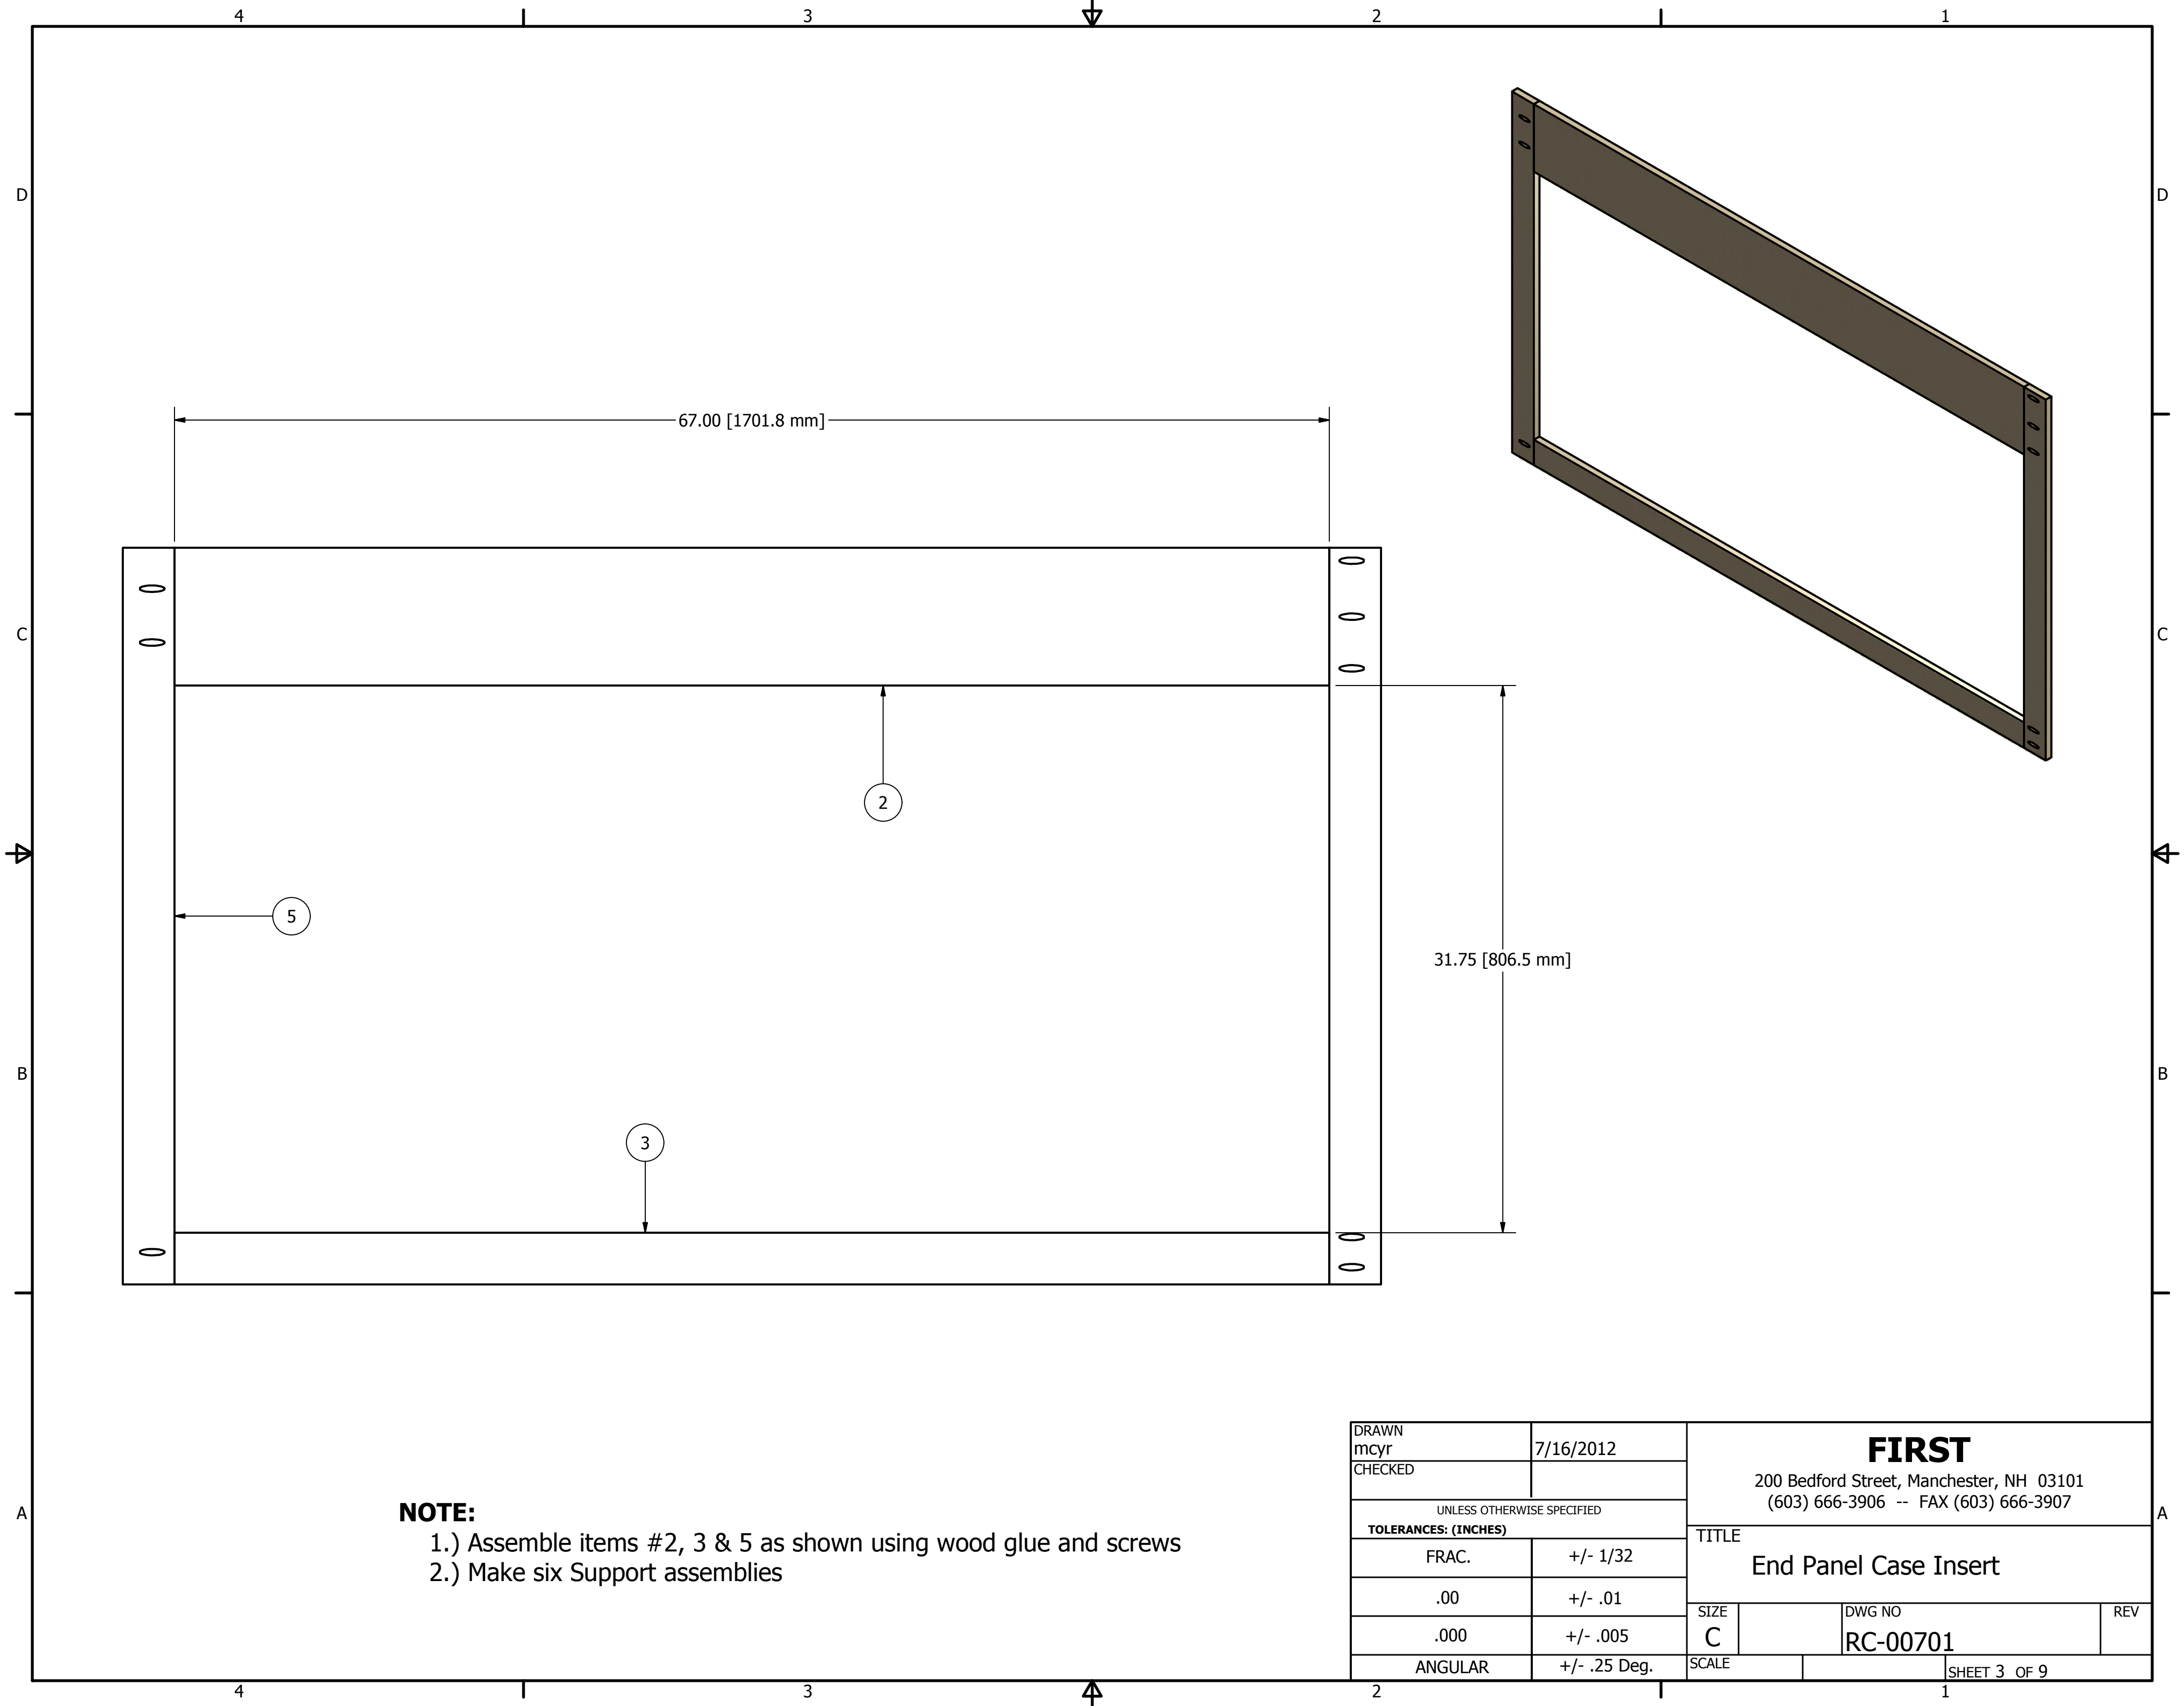


NOTE:
1.) Assemble items #2, 3 & 5 as shown using wood glue and screws
2.) Make six Support assemblies

DRAWN mcy CHECKED		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
UNLESS OTHERWISE SPECIFIED TOLERANCES: (INCHES)				TITLE End Panel Case Insert			
FRAC.		+/- 1/32					
.00		+/- .01		SIZE C			
.000		+/- .005					
ANGULAR		+/- .25 Deg.		SCALE		SHEET 3 OF 9	
				DWG NO RC-00701		REV	

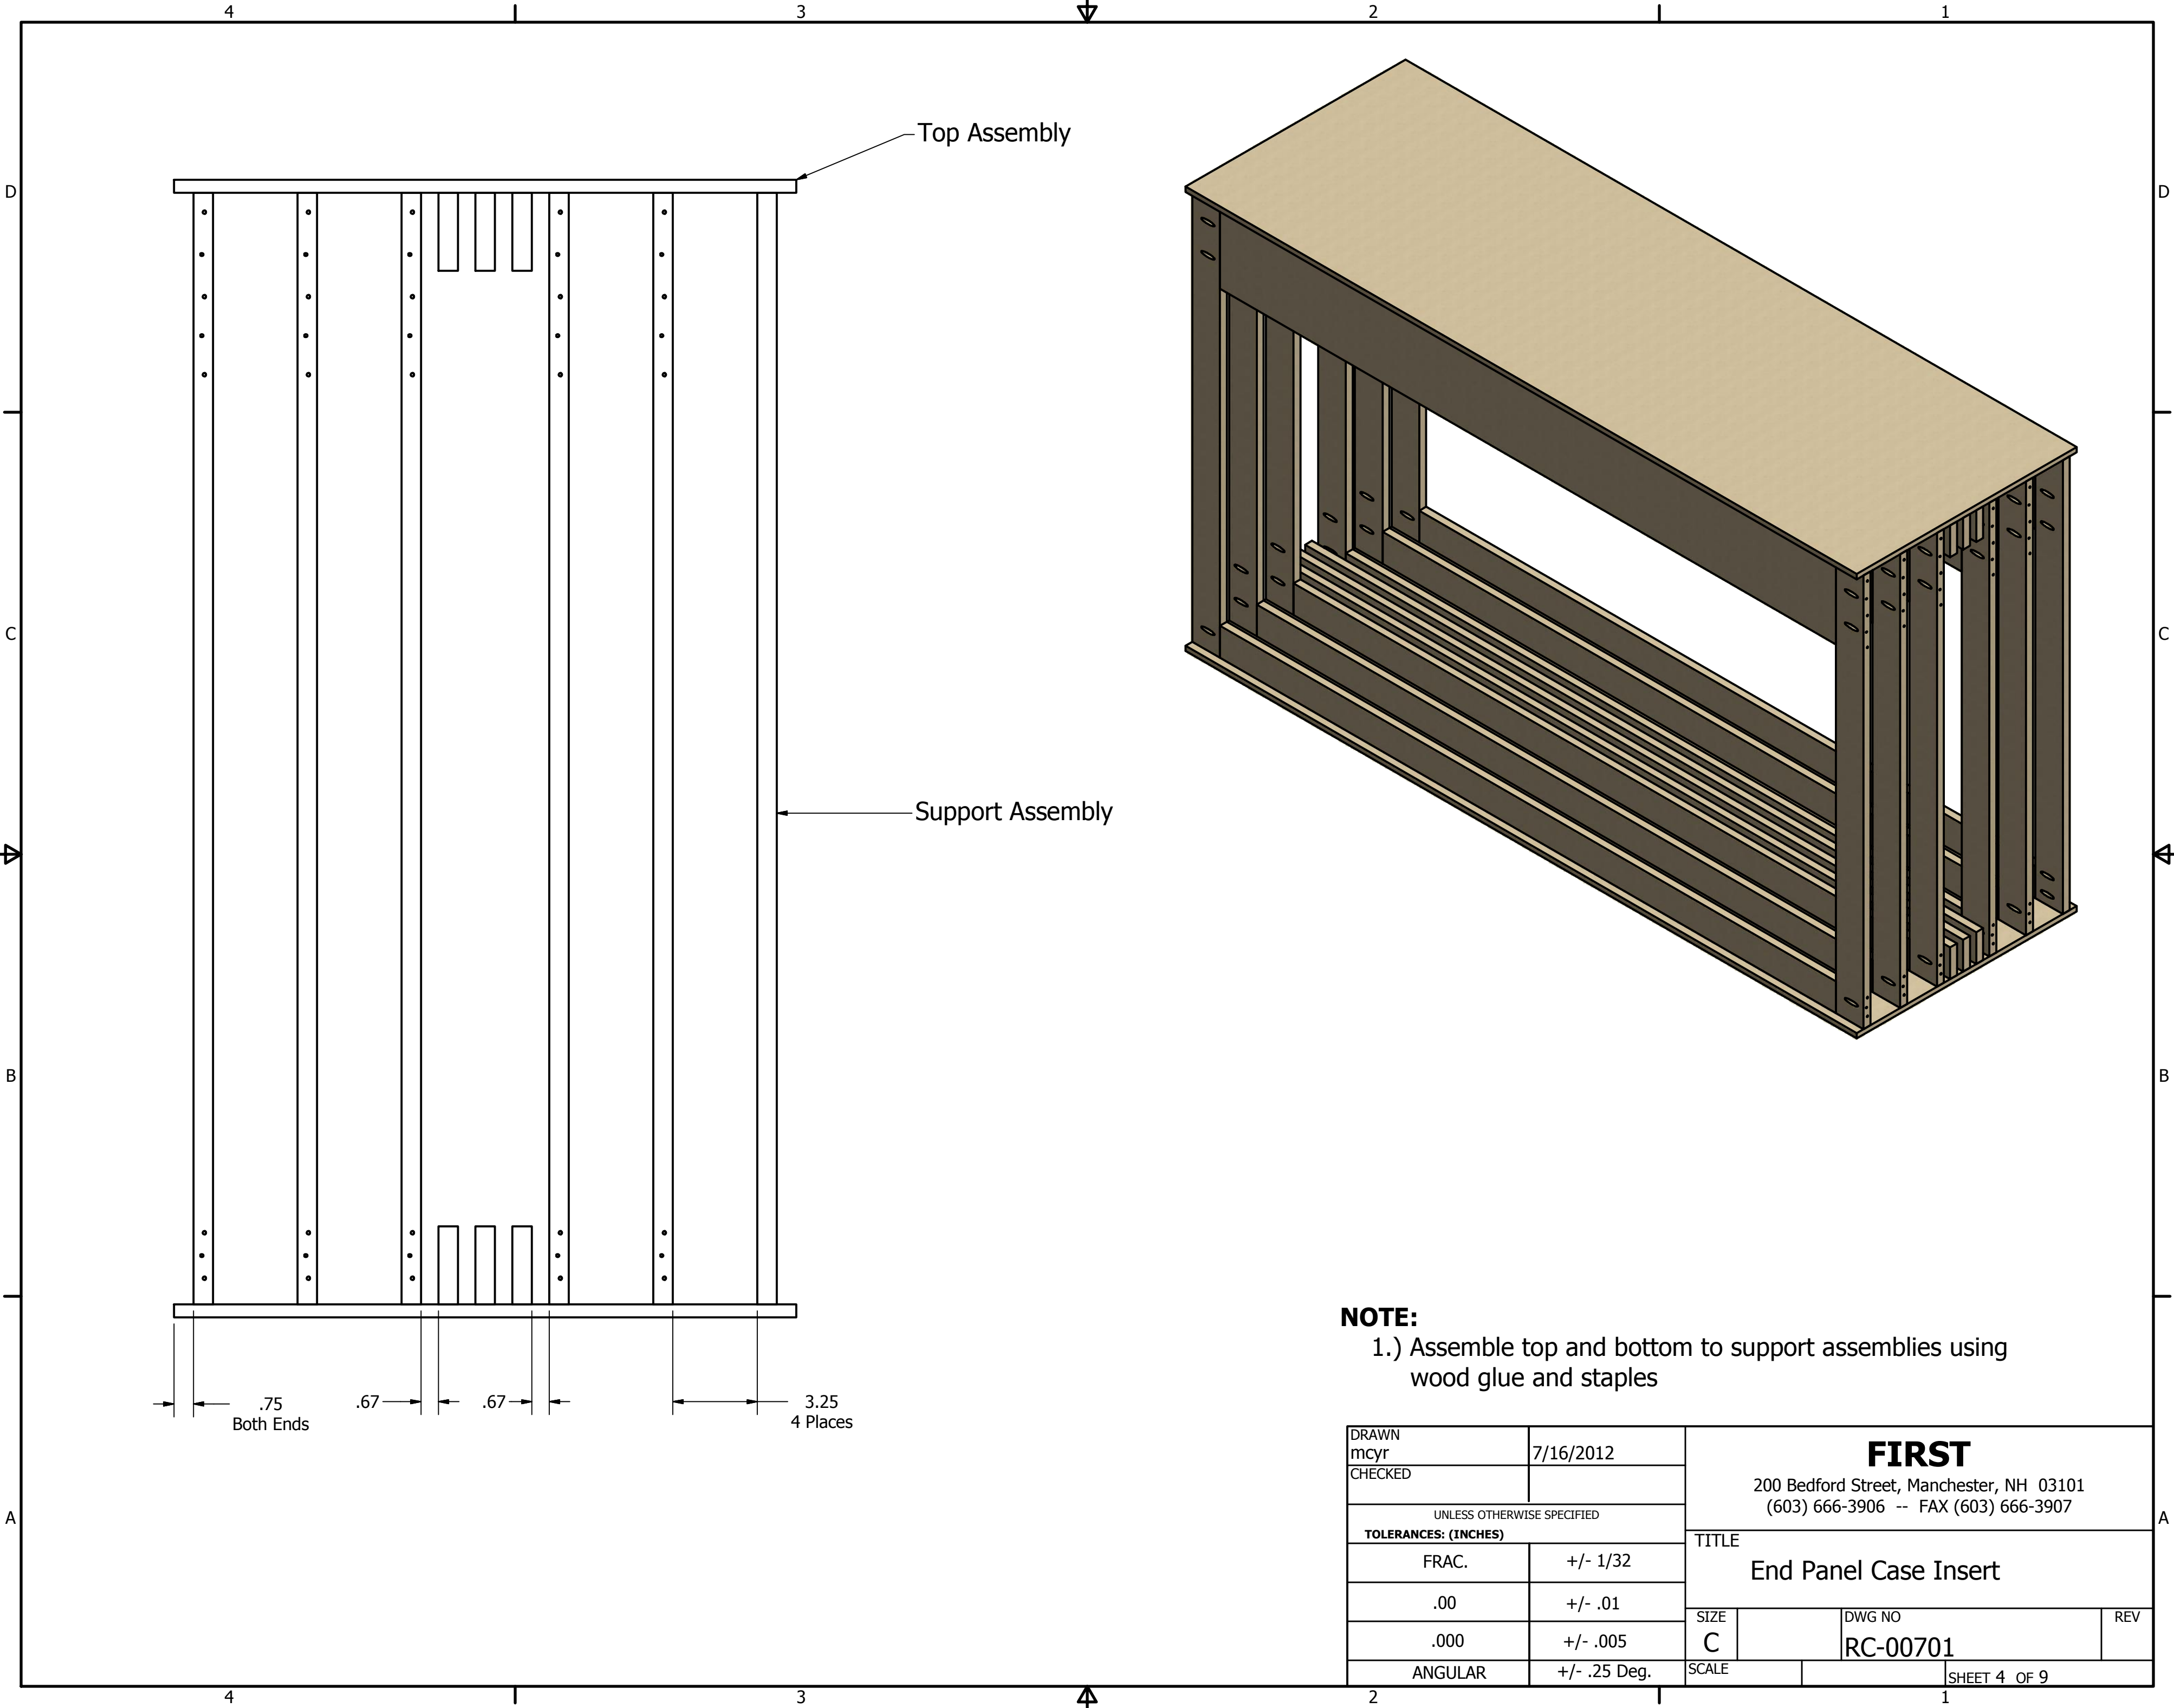



DRAWN mcy CHECKED		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
UNLESS OTHERWISE SPECIFIED TOLERANCES: (INCHES)							
FRAC.		+/- 1/32		TITLE End Panel Case Insert			
.00		+/- .01					
.000		+/- .005					
ANGULAR		+/- .25 Deg.		SIZE C	DWG NO RC-00701	REV	
				SCALE		SHEET 4 OF 9	

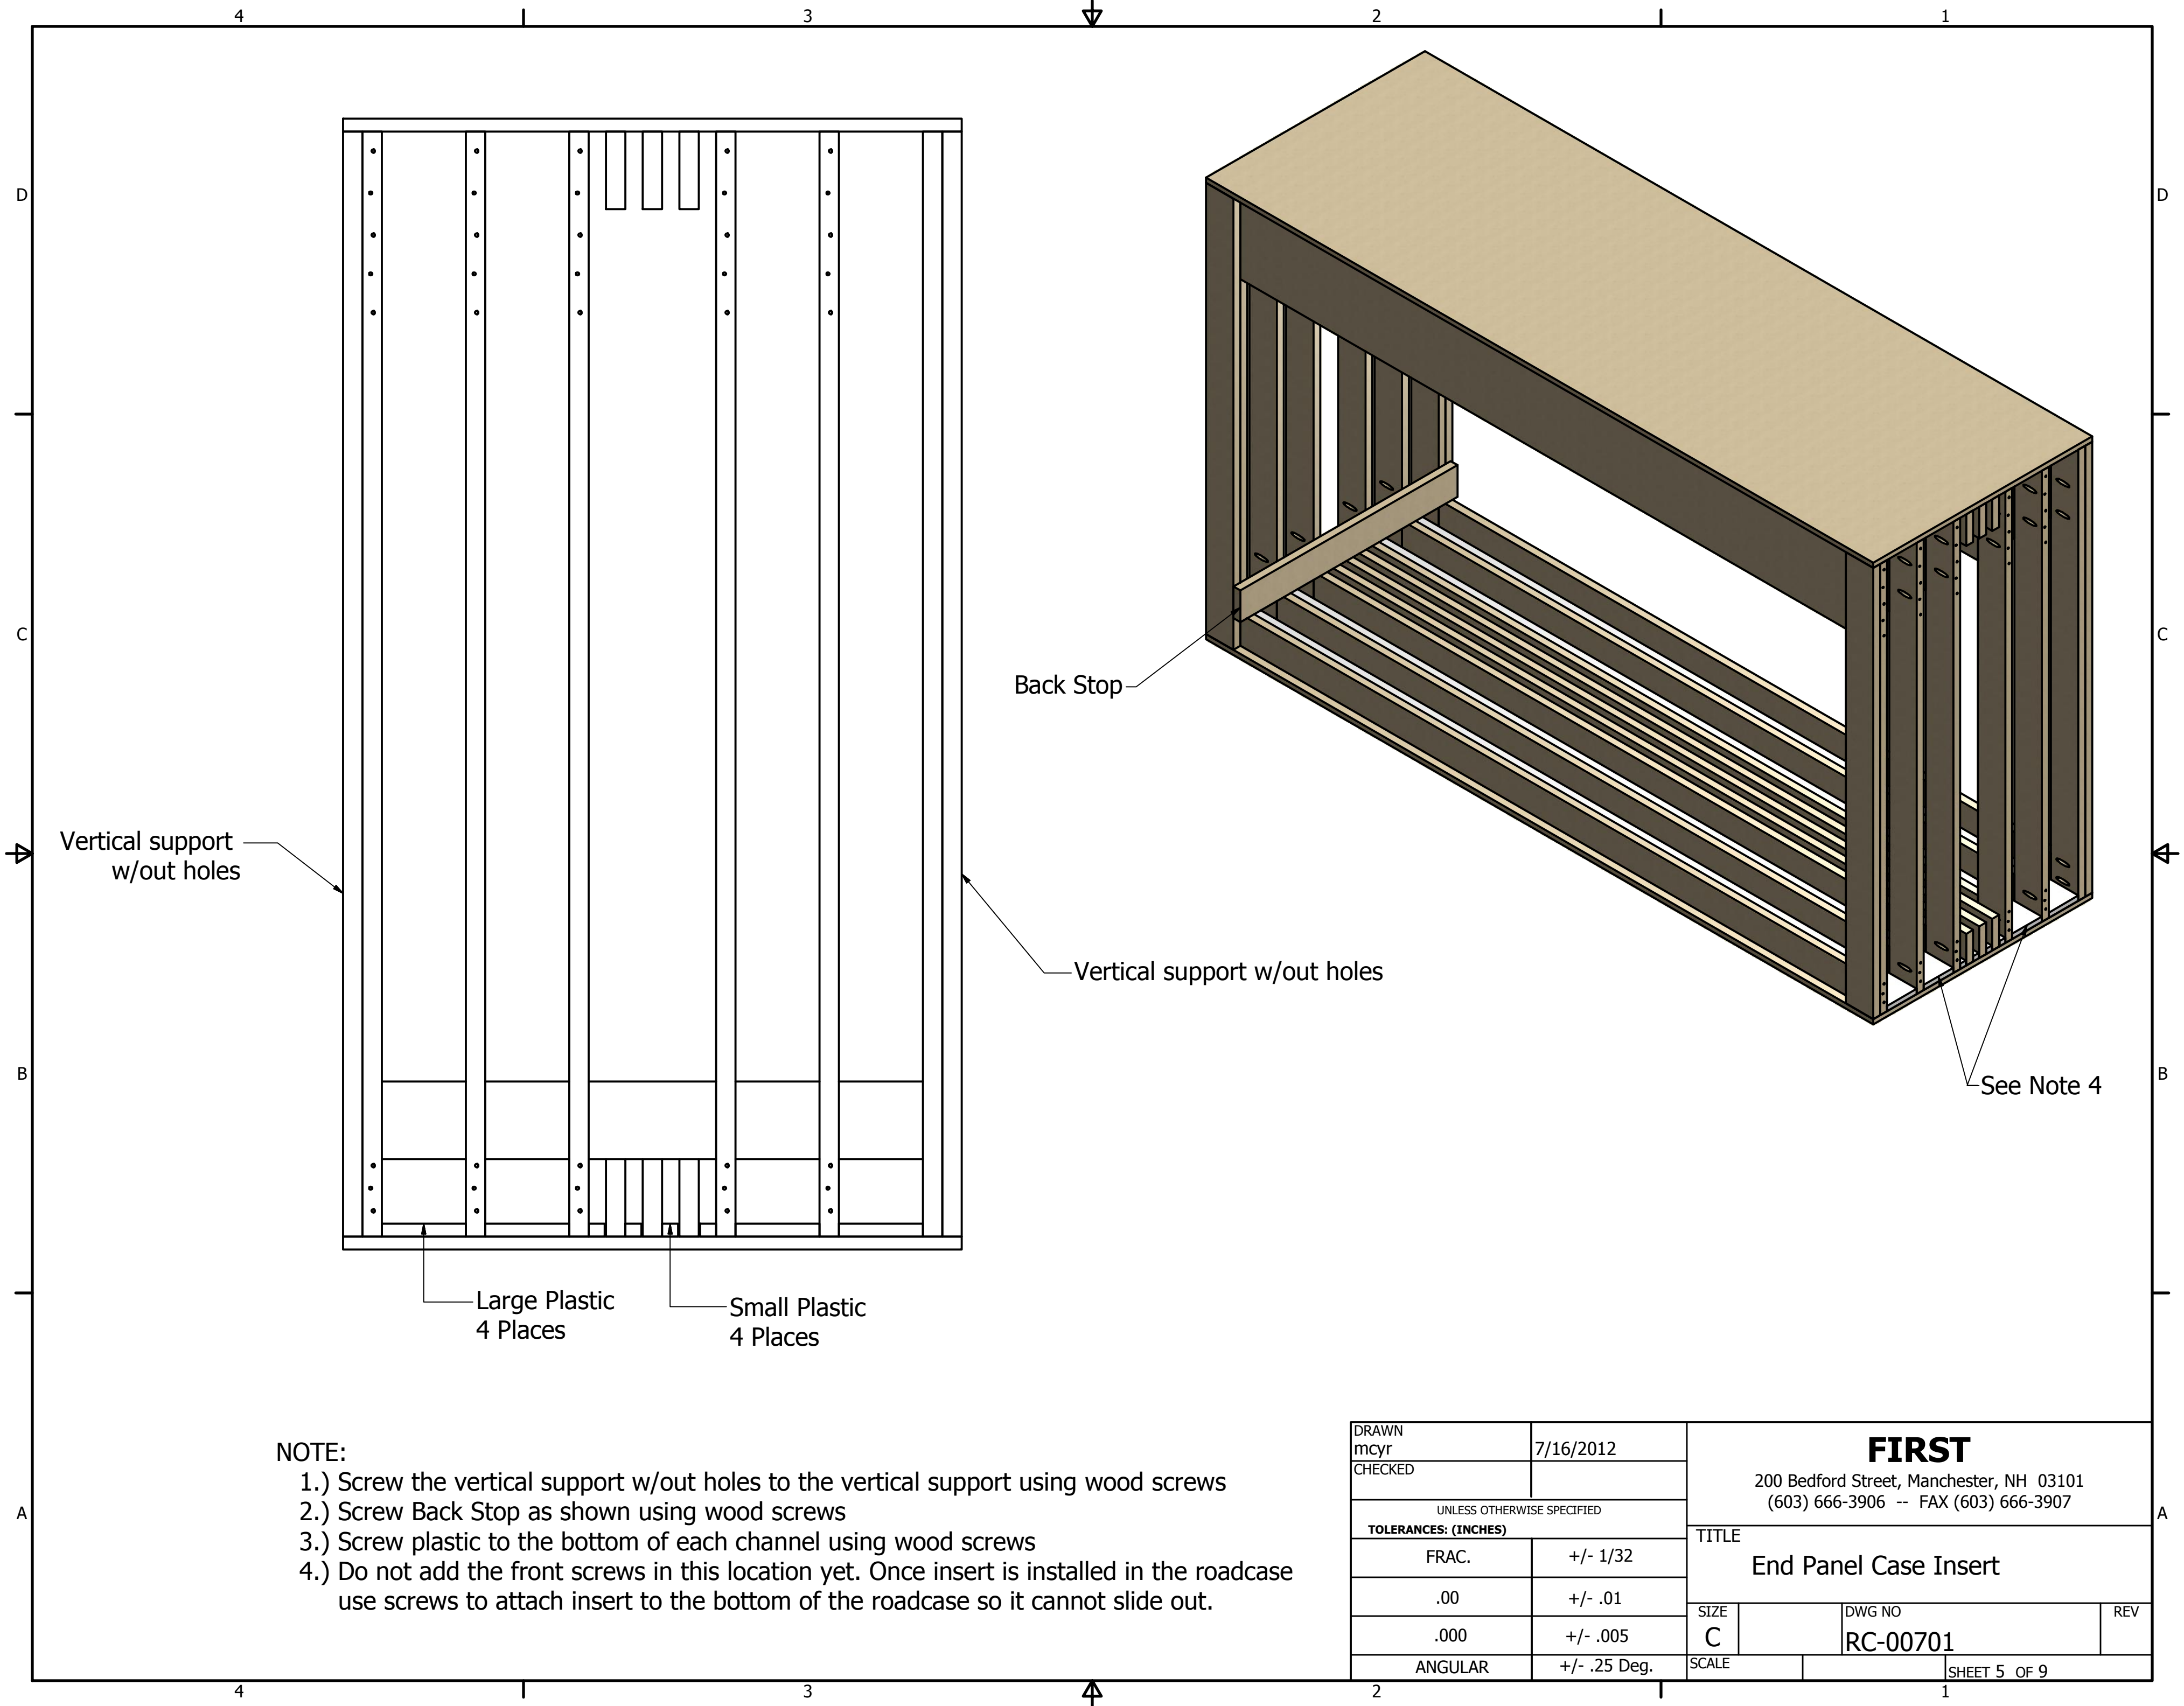


- NOTE:
- 1.) Screw the vertical support w/out holes to the vertical support using wood screws
 - 2.) Screw Back Stop as shown using wood screws
 - 3.) Screw plastic to the bottom of each channel using wood screws
 - 4.) Do not add the front screws in this location yet. Once insert is installed in the roadcase use screws to attach insert to the bottom of the roadcase so it cannot slide out.


DRAWN mcy		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
CHECKED							
UNLESS OTHERWISE SPECIFIED				TITLE End Panel Case Insert SIZE C DWG NO RC-00701 REV			
TOLERANCES: (INCHES)							
FRAC.		+/- 1/32					
.00		+/- .01					
.000		+/- .005					
ANGULAR		+/- .25 Deg.		SCALE		SHEET 5 OF 9	

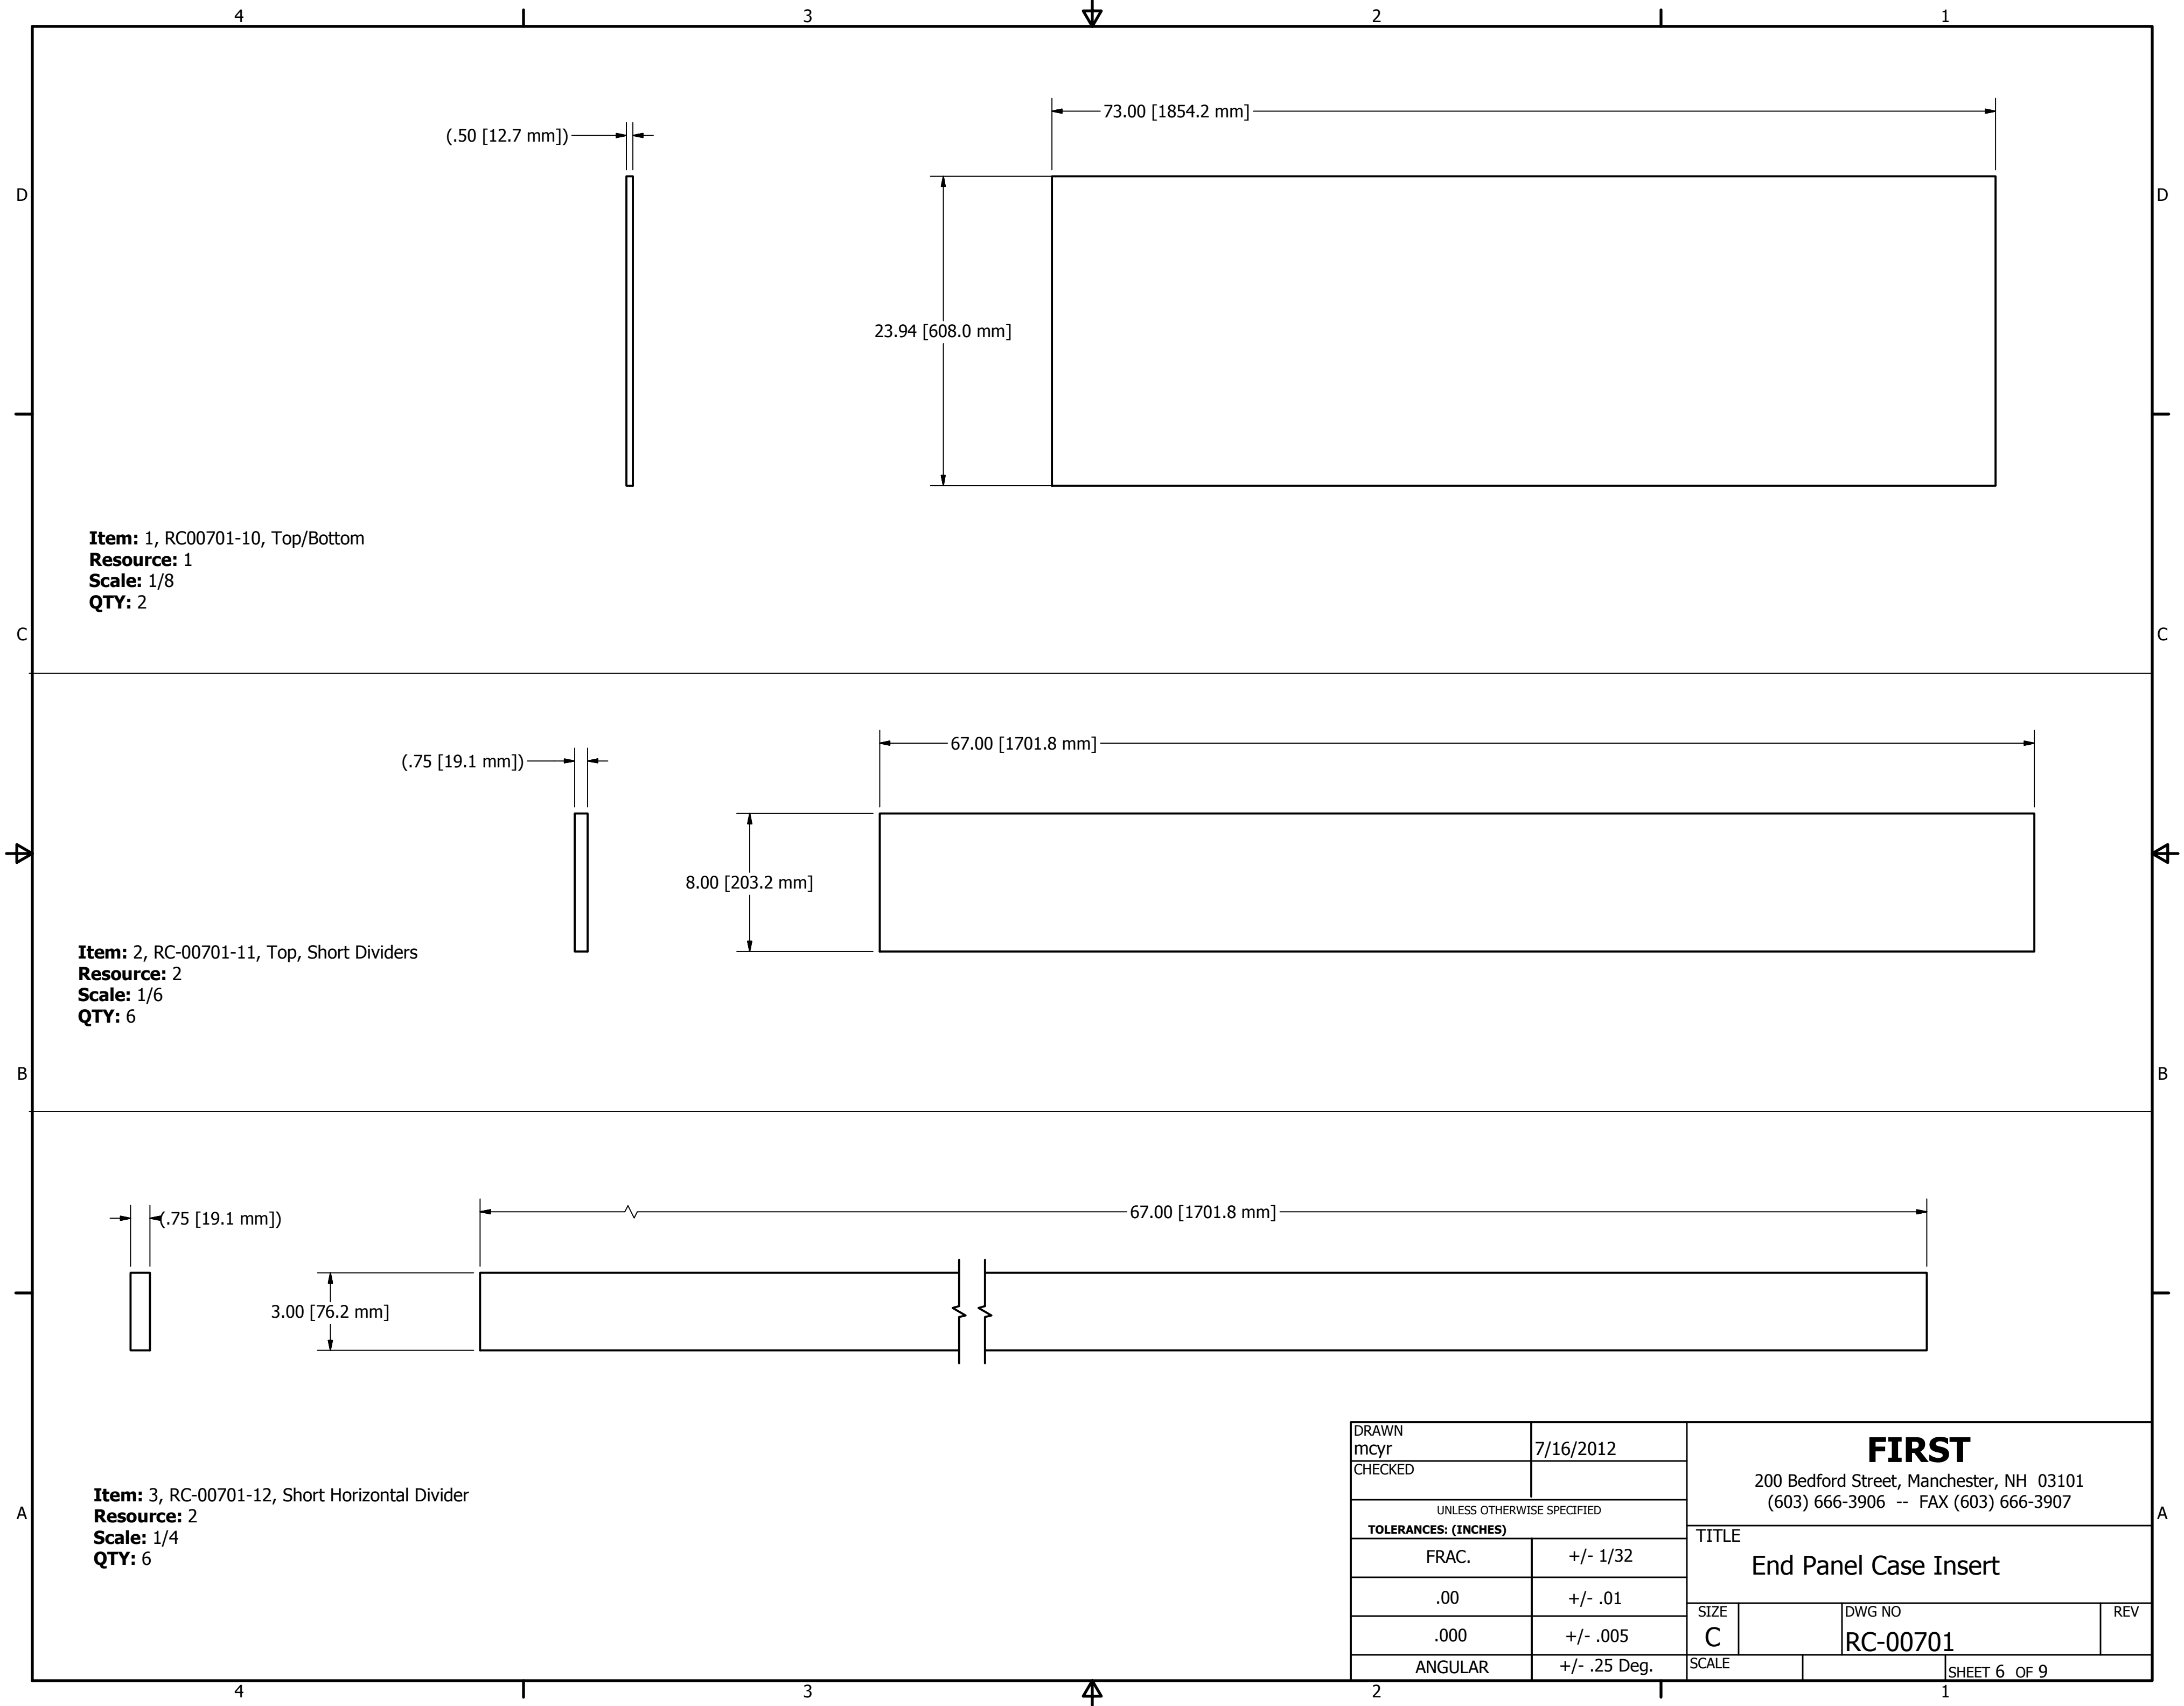

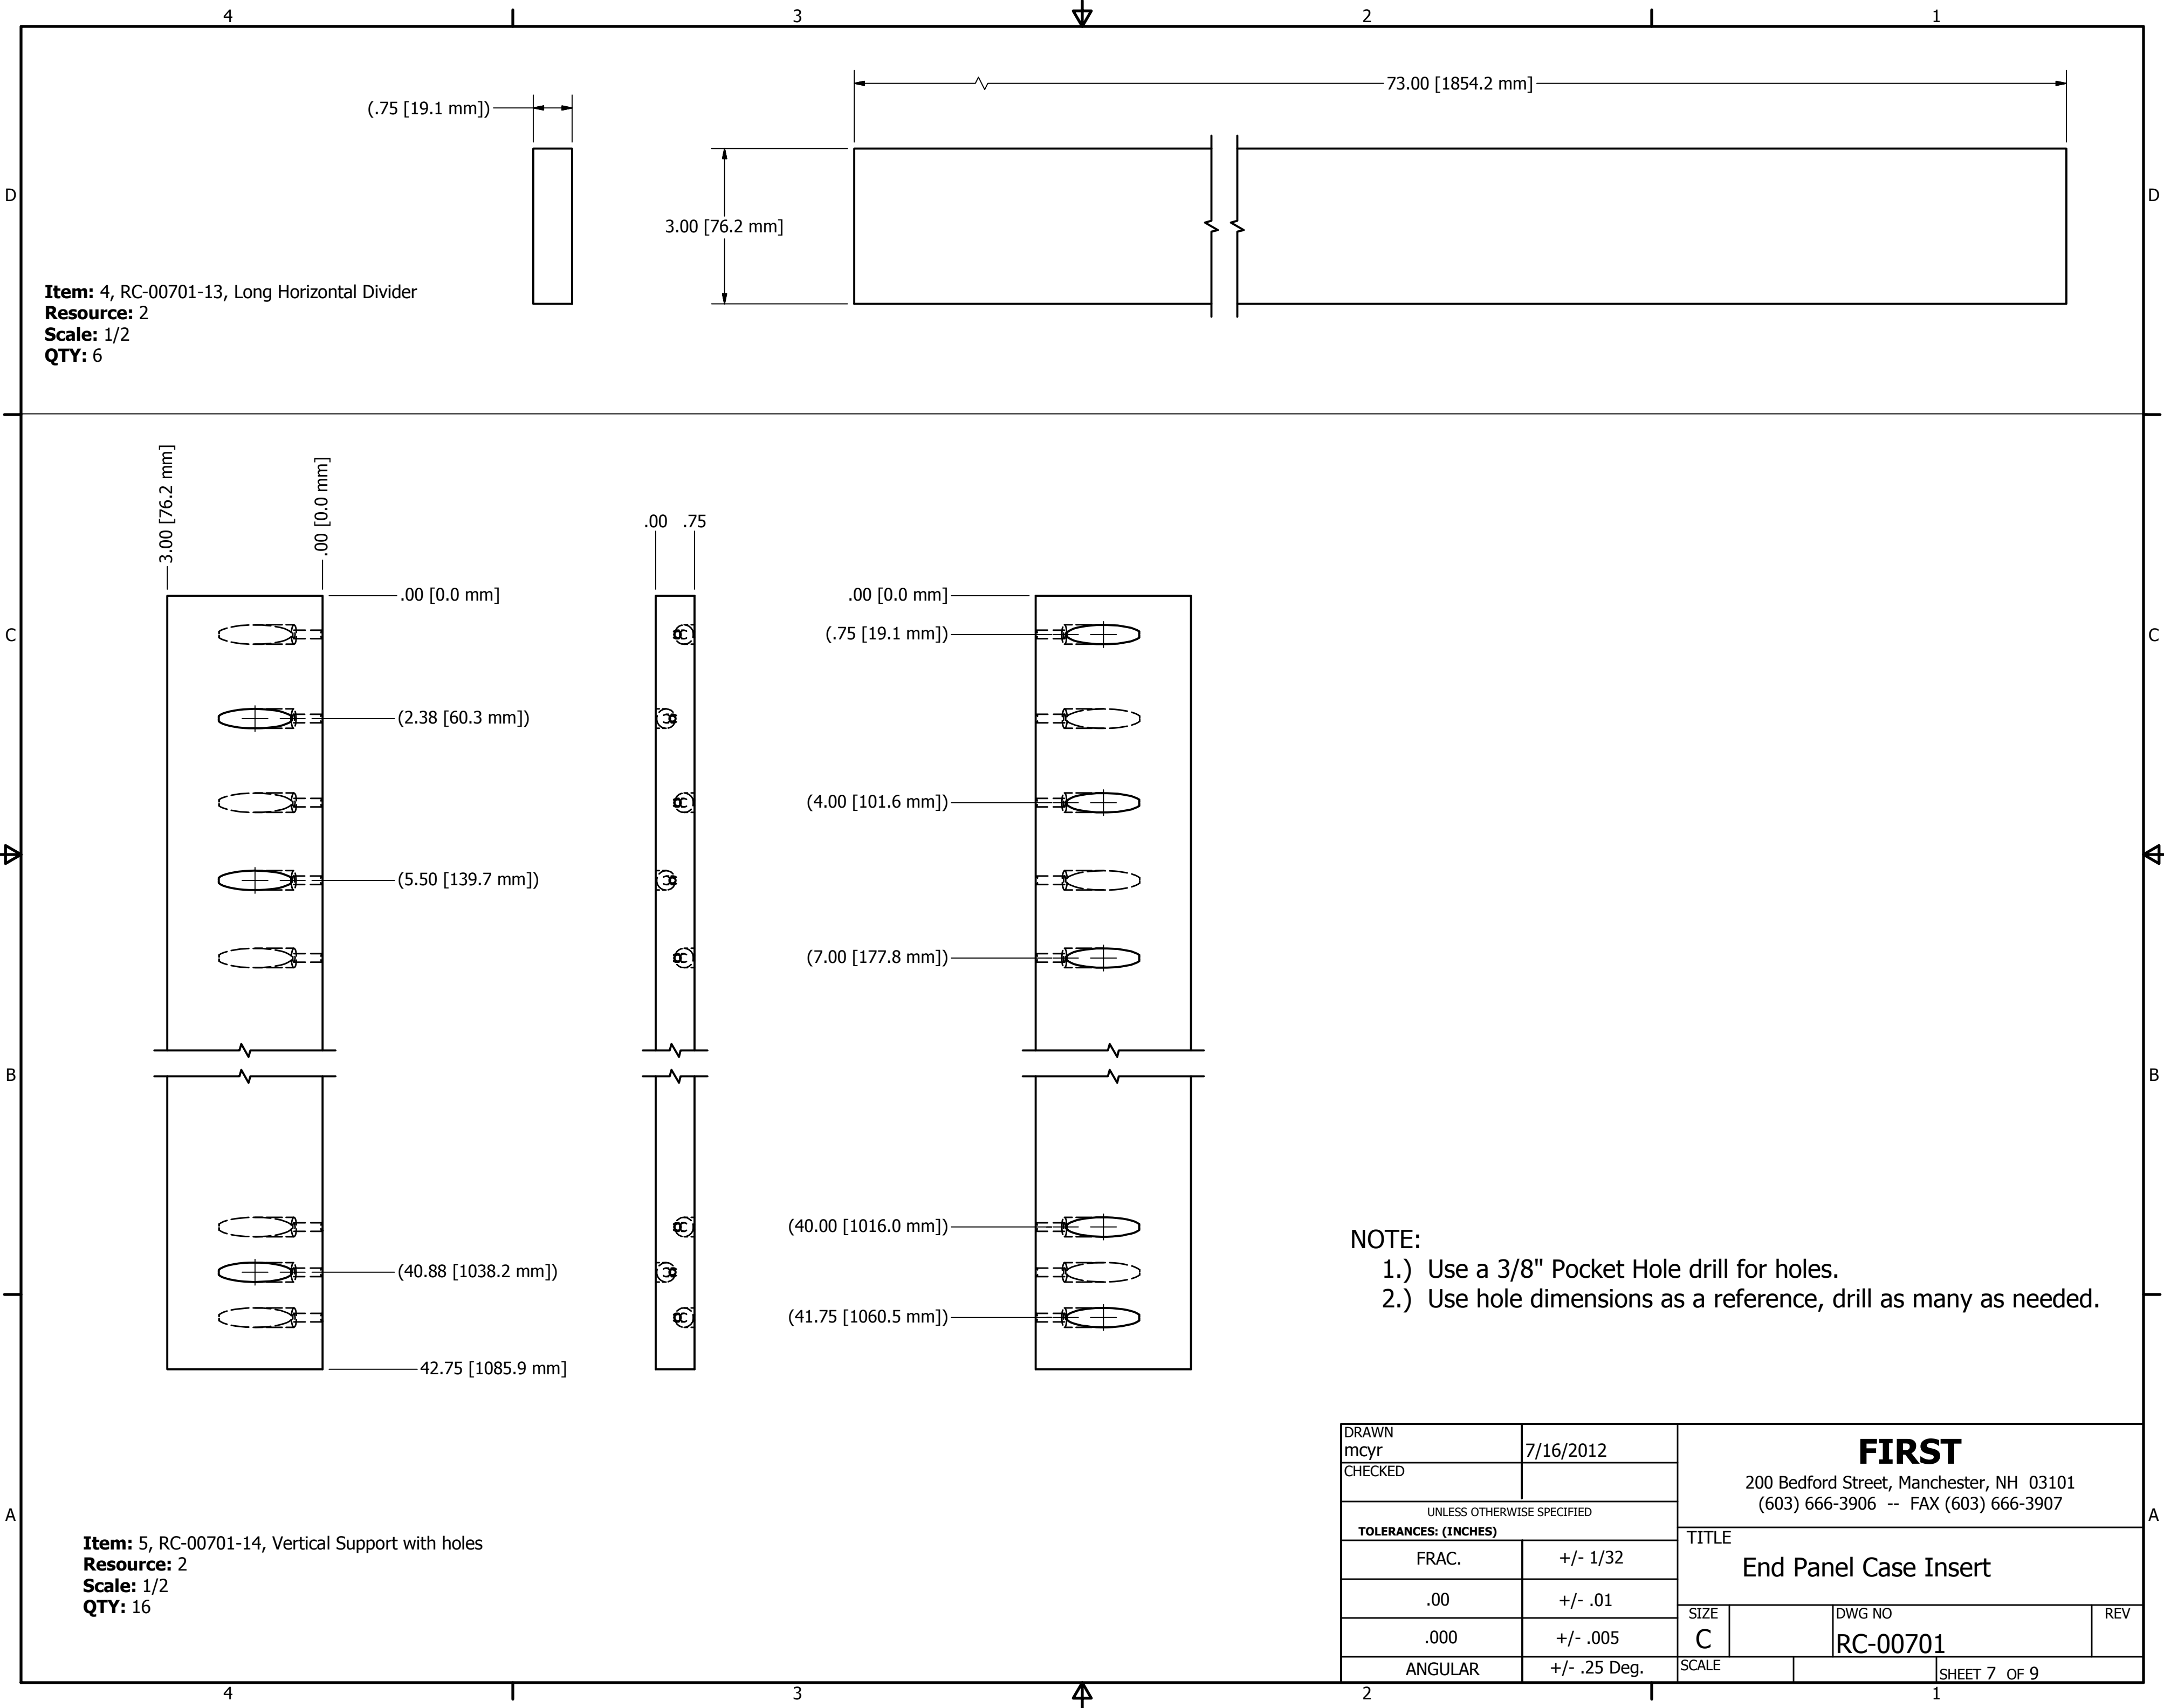

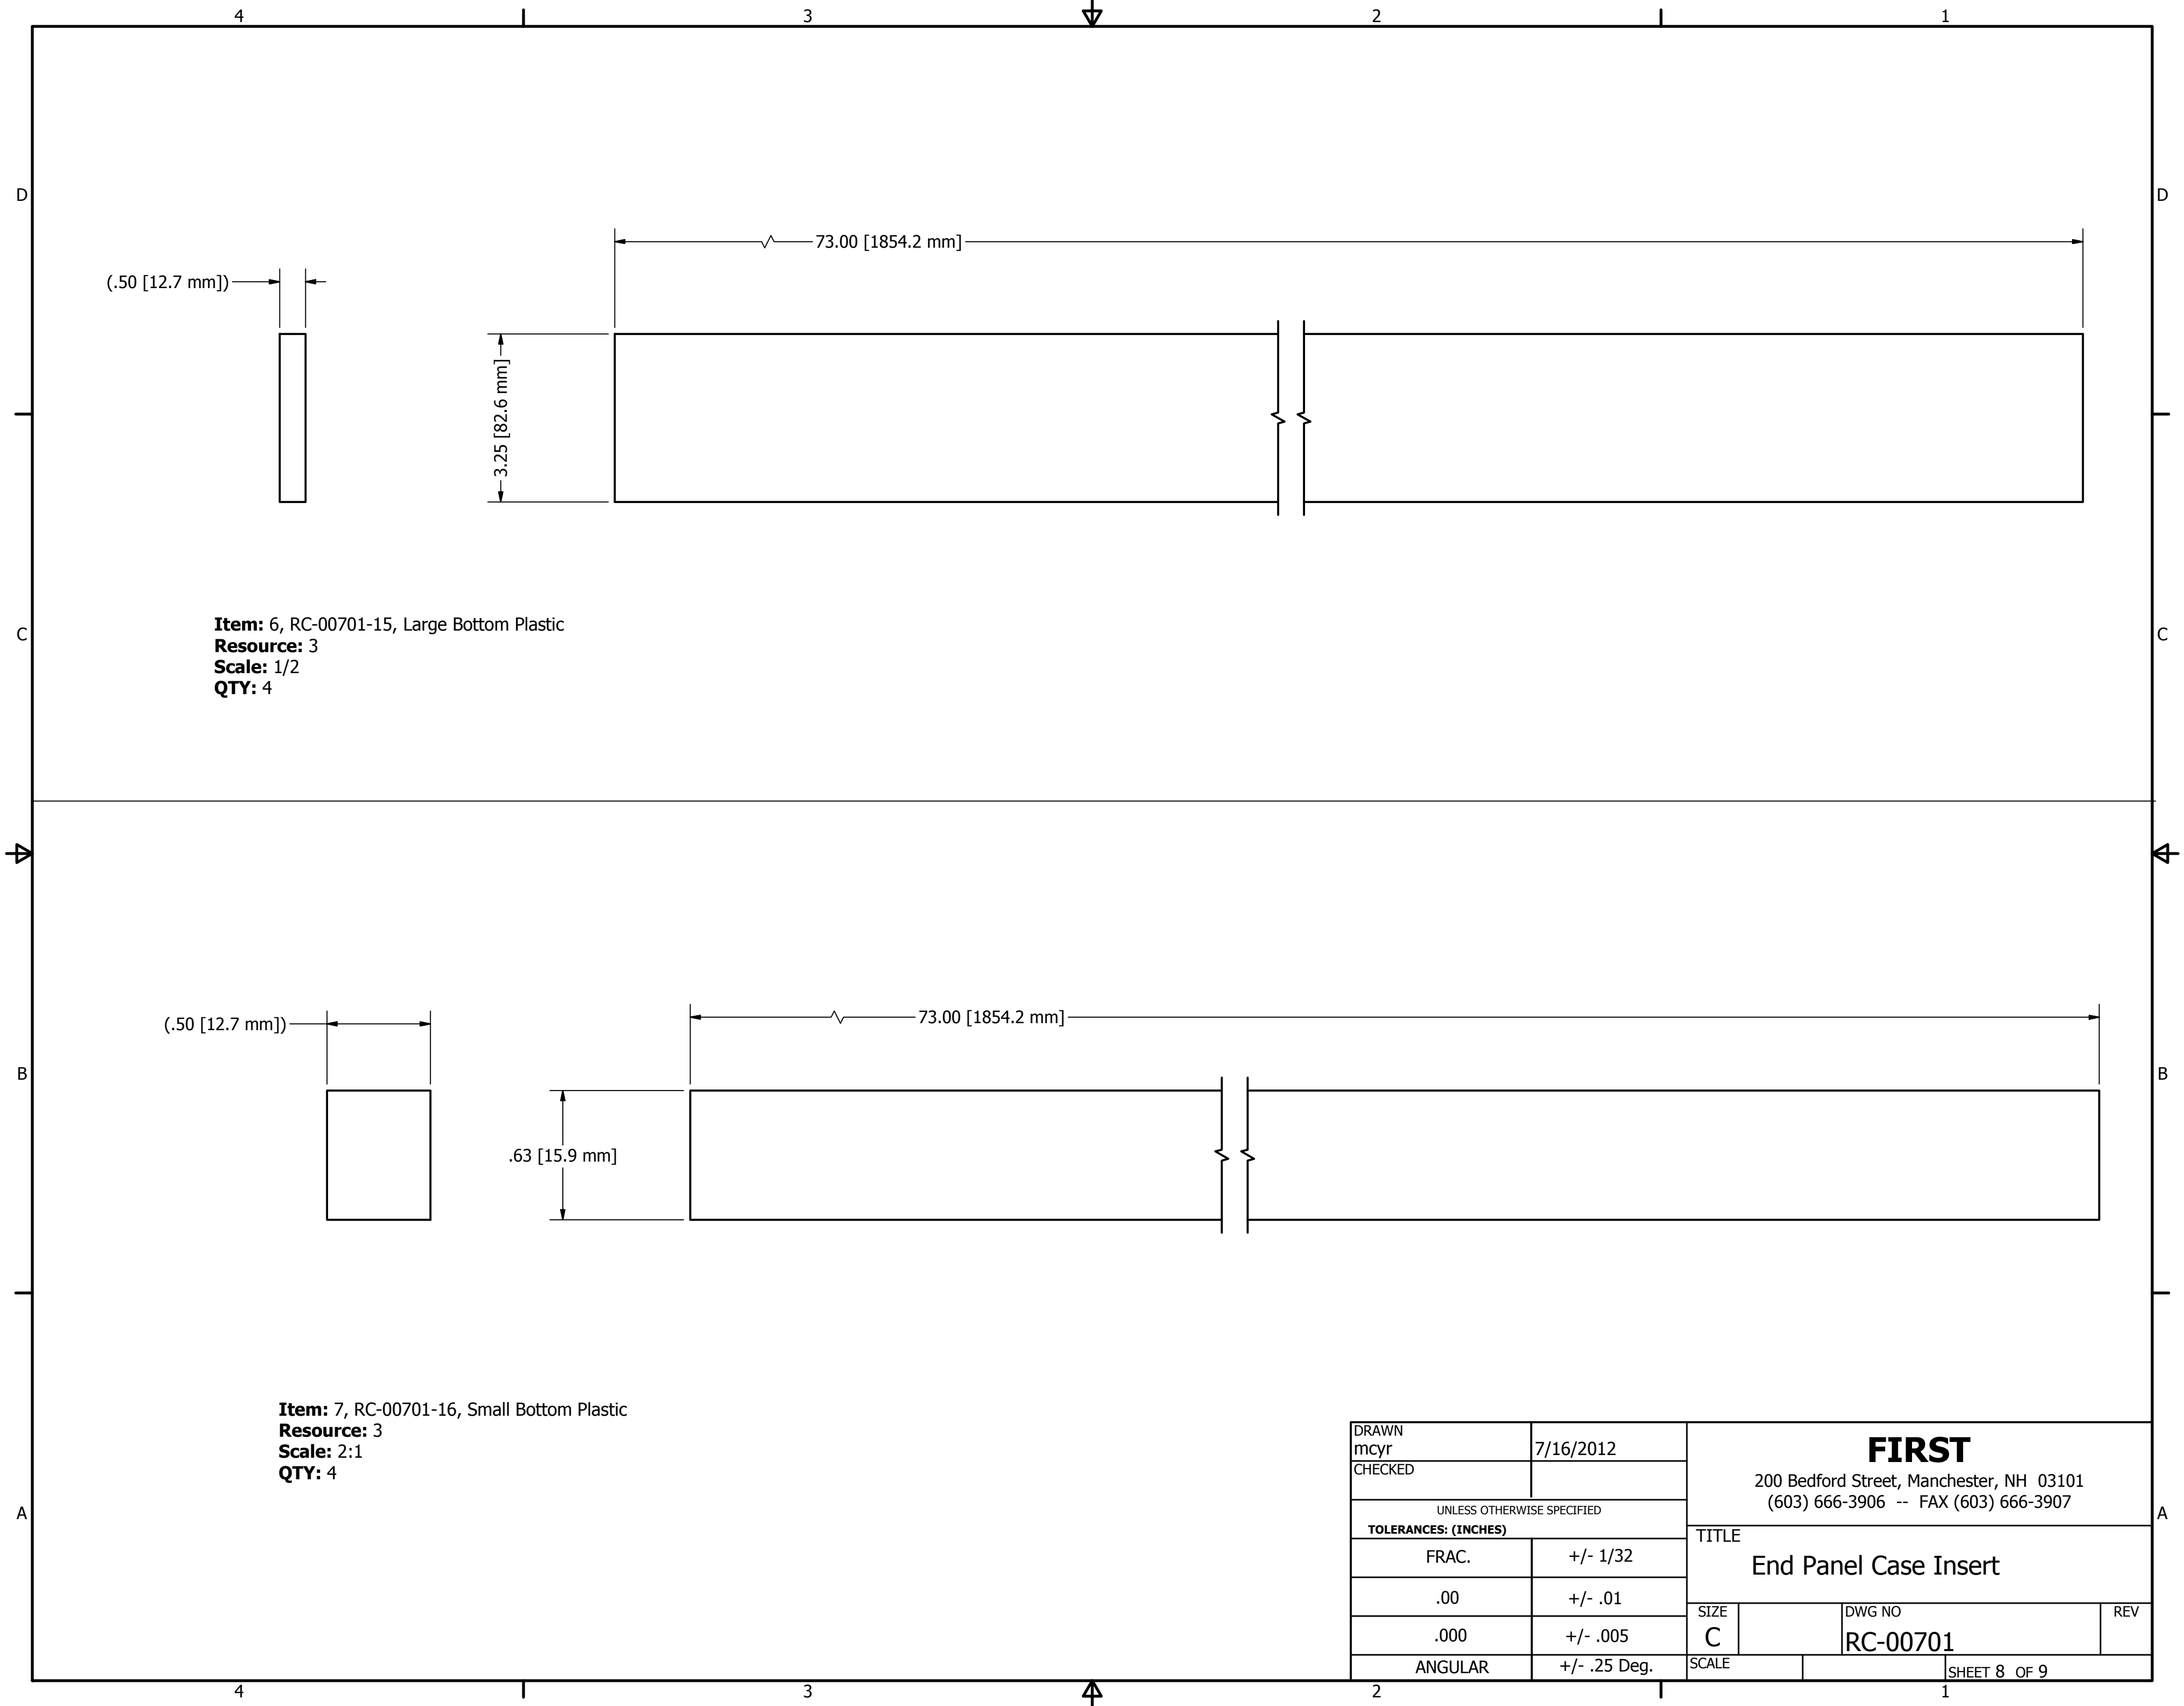

DRAWN mcyr		7/16/2012		FIRST 200 Bedford Street, Manchester, NH 03101 (603) 666-3906 -- FAX (603) 666-3907			
CHECKED							
UNLESS OTHERWISE SPECIFIED				TITLE End Panel Case Insert			
TOLERANCES: (INCHES)							
FRAC.		+/- 1/32					
.00		+/- .01					
.000		+/- .005					
ANGULAR		+/- .25 Deg.		SIZE		DWG NO	REV
				C		RC-00701	
				SCALE			SHEET 8 OF 9

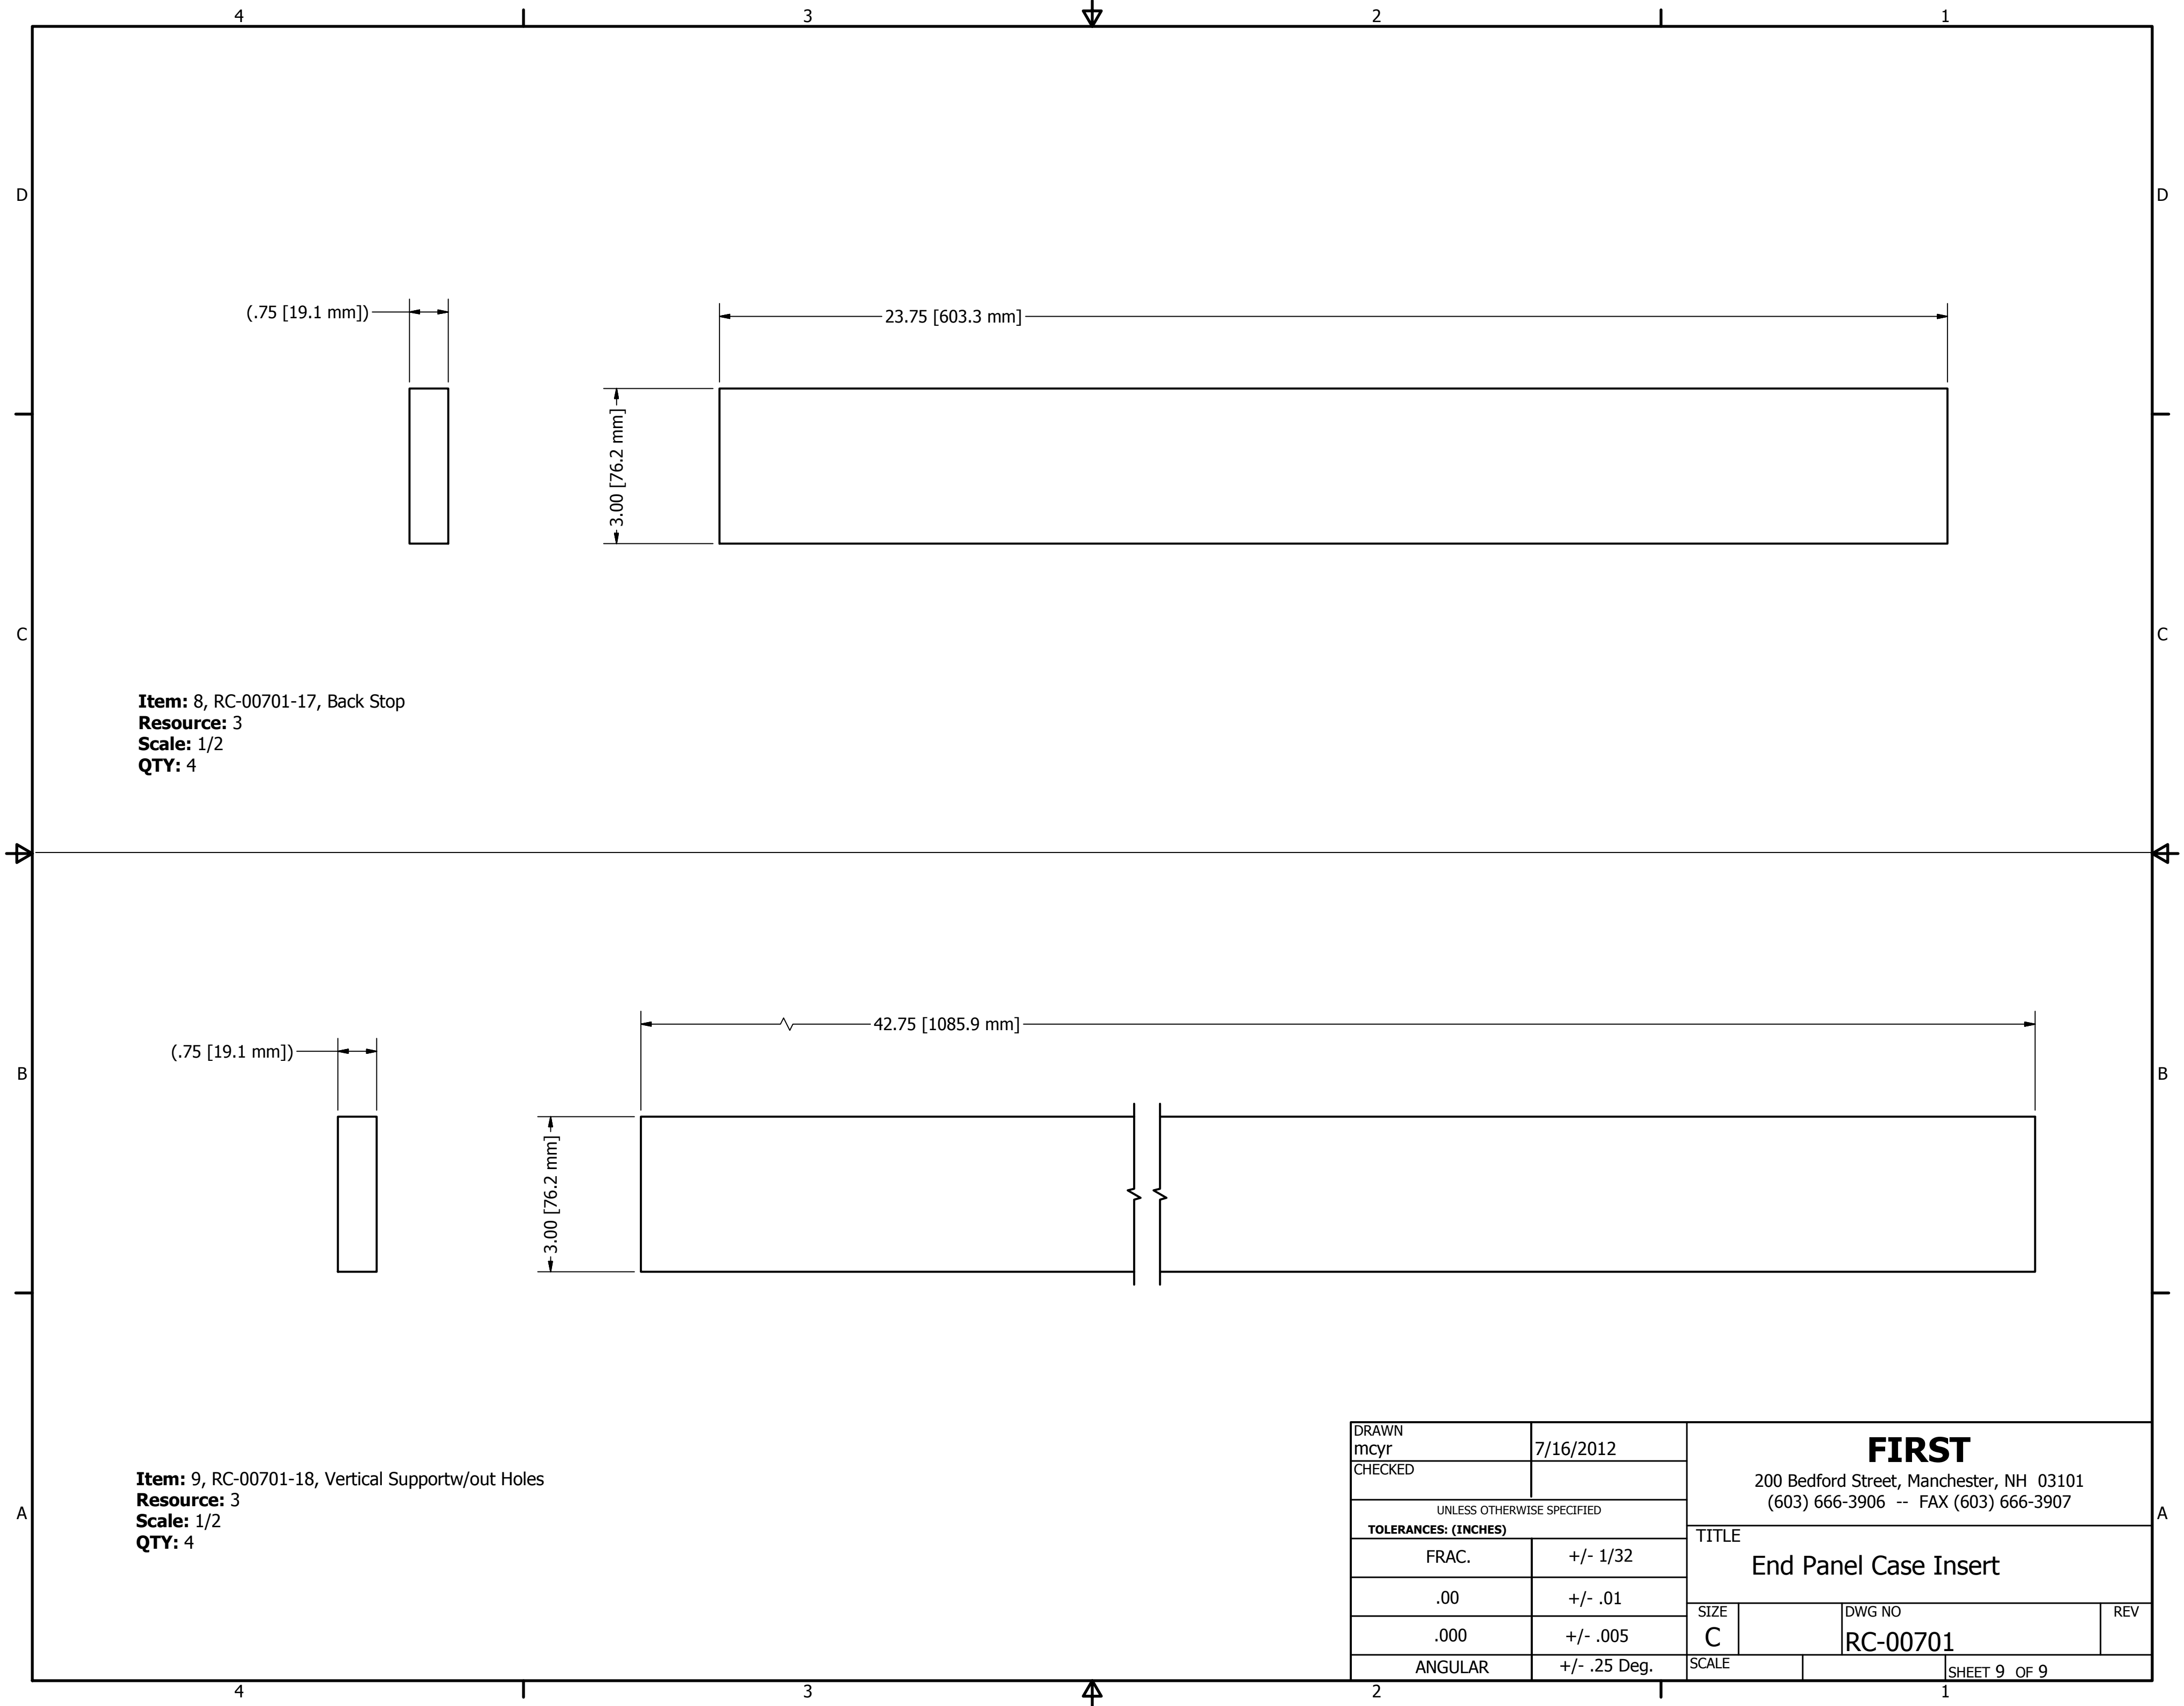

Item: 8, RC-00701-17, Back Stop
Resource: 3
Scale: 1/2
QTY: 4

Item: 9, RC-00701-18, Vertical Supportw/out Holes
Resource: 3
Scale: 1/2
QTY: 4